

Your excellent helper in cable test!

#### **INSTRUCTION MANUAL**

**Tone Generator Kit** 



NF-889



Your excellent helper in cable test!


VER: V2

#### **Contents**

interfaces and functions	1
Parts of emitter	1
Parts of receiver	1
Telephone cable tracing function	2
Network cable tracing function	3
Electric wire tracing function	4
Network cable collation function	5
Others function	6
Low voltage alarm function	7
Earphone function	
Accessories	7
Specification of product	8
Diagram of series products	9

#### interfaces and functions

Find wire on all types of connected operating Ethernet switch/Router/PC terminal

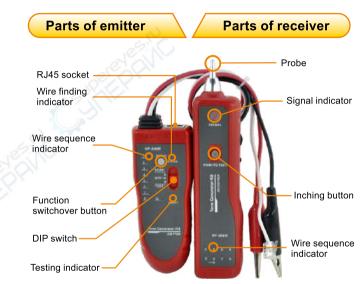



#### Telephone cable tracing function







- 1. Directly insert telephone wire with RJ11 plug into the RJ11 socket of emitter:
- (Note: Never put energized telephone cable into RJ45 port, in fear of burnout to the tester)
- 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes, which means the emitter works normally:
- 3. Press the inching button, use the probe of receiver to find target wire at the other end;
- 4. During testing, function switchover button can be pressed for switchover of dual-tone.

### Rapidly find the target wire from

CASE







Connect emitter with the telephone line to be found

Trace cable with receiver at the other end

Find wire on patch panel

CASE II







Trace cable with receiver at the other end

#### **Network cable tracing function**







- 1. Directly insert network cable into the RJ45 port of emitter;
- 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes which means normal work of emitter;
- 3. Press the inching button, use the probe of receiver to find target wire at the other end:
- 4. During testing, function switchover button can be pressed for switchover of dual-tone.

# Rapidly find the target wire from among plenty of Metwork Wires

CASE



 


Connect emitter with the network cable to be found

Trace cable with receiver at the other end

CASE







Trace cable with receiver at the other end

#### **Electric wire tracing function**







- 1. Directly insert RJ11 of crocodile clip into RJ11 port of emitter, connect telephone line with the clamp;
- 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes, which means normal work of emitter;
- 3. Press the inching button, use the probe of receiver to find target wire at the other end:
- 4. During testing, function switchover button can be pressed for switchover of dual-tone.

## Rapidly find the target wire from among plenty of Metwork Wires

CASE Note: The equipment is prohibited to be used on heavy-current wires







No need electric machine to drill!



How to find the wire from among so many wires? It is so slow by using a multimeter.

#### **Network wire Collation function**

- 1. Insert the two ends of the network cable into the Rj45 ports of emitter and receiver.
- Push function switchover button on emitter to the position of "TEST", testing indicator "VERIFY" flashes meaning normal work of emitter.
- According to 18 indicators, judge the characteristics of short-circuit, breaking circuit, open circuit and crossing.



4. During testing, function switchover button can be pressed for switchover of fast and slow levels



**CASE** 

Note: The equipment is prohibited to be used on heavy-current wires

Support direct wire collation of operating switch

Replace the above tester in cabling

### ster in cabling It can take place of cable tester

It can rapidly test open circuit/short circuit and crossing through the 18 status indicators. which is accurate and clear.



05

#### Other function

#### Open or Short circuit test Function

Please turn the button to the "TEST" position and press the "SWITCH" button for 2 seconds of the Emitter, then the "VERIFY" keep lighting and clamp the clips to the two side of the wire. If the condition is short, the "STATUS" light of the emitter will turns red. The impedance of the wire can be showed by the degree of status light, the more bright light the less impedance.

#### DC level testing function

06

Push DIP switch on emitter to position of "SCAN" . press function switchover button on emitter for 2 seconds. "STATUS" indicator will turn off and "VERIFY" indicator flashes, insert the crystal plug of crocodile clamp into RJ11, clamp the two ends of cable with crocodile clamps, in case that "STATUS" indicator lights up in red, it means the end clamped by red clamp is positive pole, in case that "STATUS" indicator lights up in green, it means the end clamped by red clamp is negative pole, electric level can be judged by brightness of the status indicators; the lighter the indicator, the higher the level is; the darker, the lower.



test positive and negative pole of DC electric level

#### Low voltaage alarm function

Push DIP switch on emitter to position of "SCAN", if the that battery level is lower than 6.0V. "STATUS" and "VERIFY" indicators will light up at the same time, it indicates to have new battery.

#### Earphone function

In noisy environment, earphone can be used to prevent interference from the outside.





#### Volume adjusting funcction

While tracing cable, volume can be adjusted for moderate level of sound.

#### Spotlight function

You can easily work as usual with backlight at night and in dark.

#### Energy-saving

Inching switch can automatically delay power-off. The continuous lifespan of battery is over 50 hours.

#### Accessories







RJ45 adapter cable

Earphone

9V battery

07

Your excellent helper in cable test! Your excellent helper in cable test!

#### Applicable users

Applicable scope

Telecom bureau/net bar/telecom engineering companies / network engineering companies/power supply/ army and other departments requiring wire.

Wire engineering of telecom, network and regular maintenance work; network line engineering of computer; other wire engineering and maintenance.

#### Specification of product

Item	Specification		
Product name	Wire tracker		
Power supply	DC, 9V battery		
The max working current	Emitter	≤10mA	
	Receiver	≤30mA	
Signal transmission format	Multi-frequency impulse		
Signal output electric status	8Vp-p		
Distance of signal transmission	2km		
Appearance dimension	Emitter	126×49×34,mm	
	Receiver	175×42×27,mm	
	Whole set	270×165×45,mm	
Weight	Emitter	0.060kg	
	Receiver	0.072kg	
	Whole set	0.420kg	

#### The list of package

1. Emitter	1 piece	4. RJ45 adaptor cable	1 piece
2. Receiver	1 piece	5. Instruction manual	1 piece
3. Earphone	2 pieces	6. Toolkit	1 piece
		7 Color box	1 piece

#### Diagram of series products







NF-868

NF-268

NF-8601







NF-300

NF-800

NF-816







NF-468L

NF-820

NF-2100







NF-708

NF-905

NF-911