

ATTEN INSTRUMENTS

- RF Microwave Instruments • RF Microwave Components
- Spectrum Analyzers • Regulated DC Power Supply
- Switching DC Power Supply • Digital Storage Oscilloscope
- Signal Generator • Attenuator • Amplifier • 850 Rework Station
- 936 Constant Temp Soldering Station
- Electronic Instruments • Electronic Tools


FRANCHISER

AT938/AT938D/AT980/AT980D

SOLDERING STATION

Thermo-Control Anti-Static

User's Manual

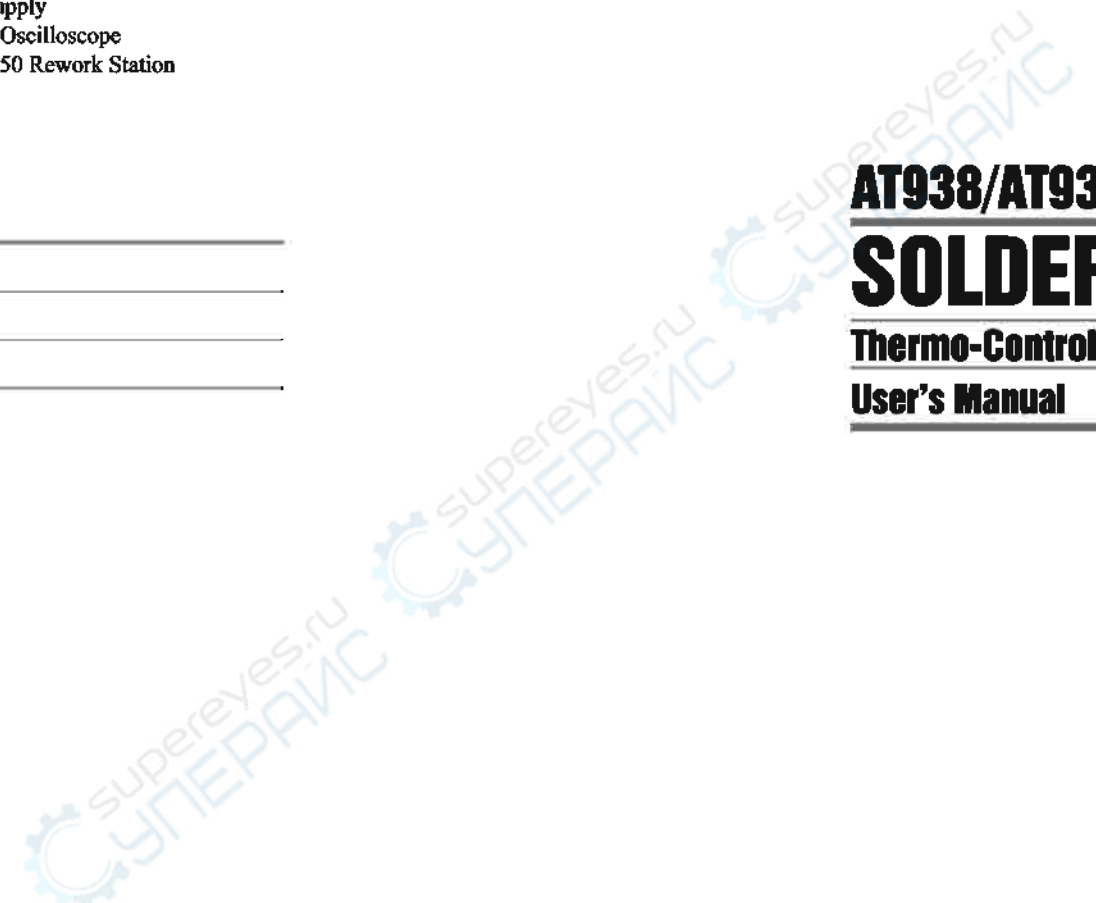

Thank you for purchasing the Atten Soldering station. Please read this manual before operating the equipment. Keep manual in accessible place for future reference.

Warning:

Temperature of iron tip will be up to 200–400 °C after connecting power, so it may lead to injury or fire because of improper usage. Please abide the following terms:

Don't touch the iron tip or surrounding metals.

Never operate it near the flammable gas or substance.

Disconnect from power source if the unit will not be used for long periods. Switch off power during short breaks.

Replace accessories or iron tip after turning off the station and let it cool down.

Never operate this device, if you don't have soldering experience or enough knowledge to use.

Keep away from children.

Safety Precautions:

Caution: Improper usage can cause serious injury to personnel and/or damage to equipment. For personnel safety, please follow these precautions

Never use it to do other work except soldering.

Do not subject the main unit to physical shock. Never drop or sharply jolt the unit.

Don't change the device at will

Replace loss items with original accessories of ATTEN.

Don't put it in water or operate with wet hands

Don't pull the cable but hold tightly the plug when you take it out of plug.


Please keep the operate place well ventilated since soldering process produce smoke.

Don't play with other people or would be easy to hurt others or yourself.

What's Included

Device	1 PC
Soldering Iron	1 SET
Iron holder	1 PC
Power Cord	1 PC
Manual	1 COPY
Clean sponge	1 PC

Interchangeable Soldering Tips of Soldering Station (AT-900M)

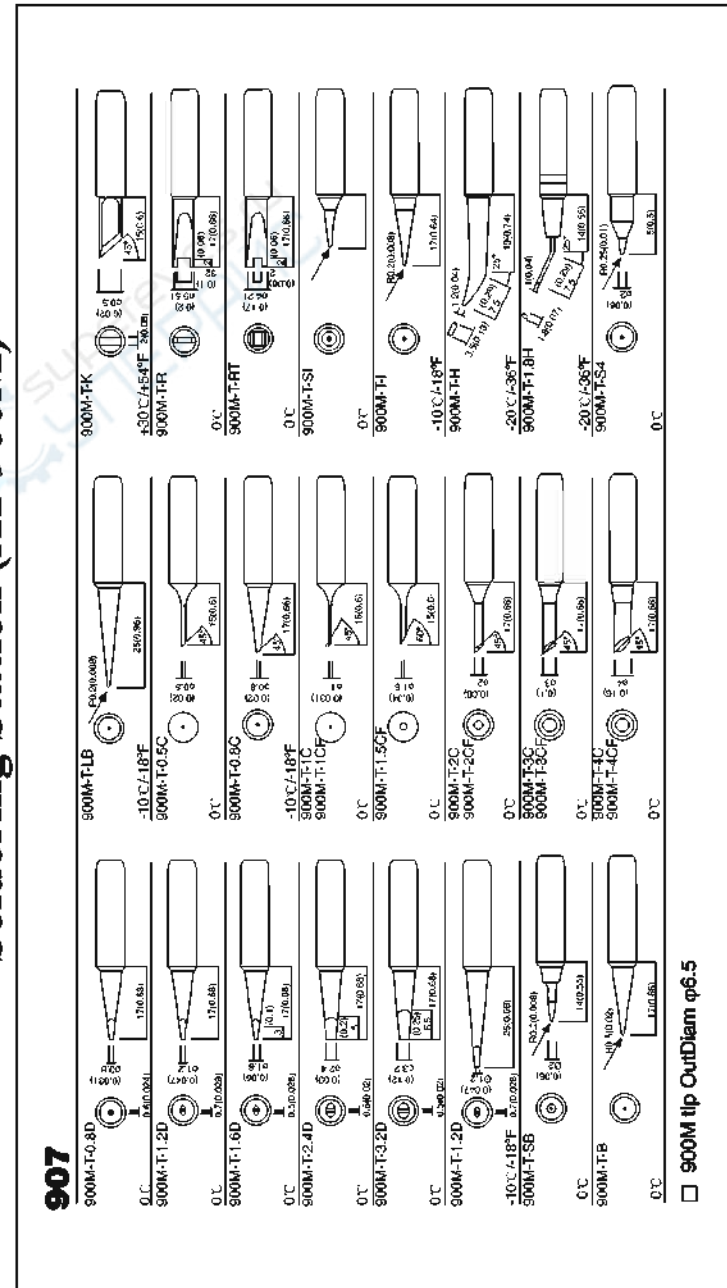

Care and Maintenance

- Keep the soldering station dry; if it gets wet, dry it immediately.
- Use the soldering station only in normal temperature environments.
- Keep the soldering station away from dust and dirt.
- The soldering iron tip should be cleaned after use by wiping it on the damp sponge found in the soldering iron stand. This is to get rid of burnt solder or fluxes that cause oxidation on the tip.

Changing Soldering Tip


- Always turn the power OFF when removing or inserting a tip
- Let the tip to cool down to room temperature before holding it with heat resistant pads
- Unscrew the metal cap nut ①.
- Pull out the shaft of the soldering iron ②.
- Replace it with a new soldering tip.
- Put back the shaft and securely lock with the metal cap nut

Specification:

	AT938	AT980	AT938D	AT980D
Input voltage	220VAC \pm 10% 50Hz / 110V AC \pm 10% 60Hz			
Power consumption	60W(MAX)	80W(MAX)	60W(MAX)	80W(MAX)
Temperature controlling range	200°C ~ 480°C (392°F ~ 896°F)		150°C ~ 450°C (302°F ~ 842°F)	
Output voltage	28VAC			
Temperature stability	\pm 5 °C (static)		\pm 1 °C (static)	
Display	calibration		LCD	
Max surrounding temperature	40°C			
Calibrating method	Mechanical calibration		Digital calibration	
Temperature range for calibration	/		50°C ~ -50°C (122°F ~ -58°F)	
Ground impedance	<2 Ω			
Ground voltage	<2mV			
Locked temperature	/		/	
Heating element	2 cores (ATTEN)	4 cores (imported)	2 cores (ATTEN)	4 cores (imported)

*Specifications are subject to change without prior notice.


Heating element (pic)

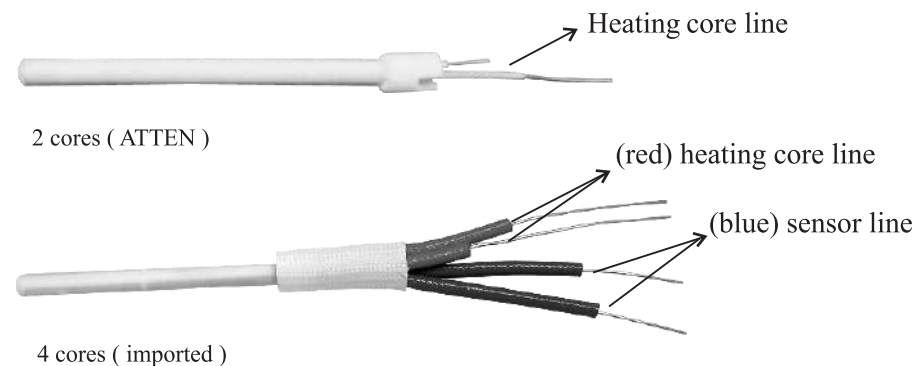

AT938D/AT980D Control Panel Guide:



Introduction for LCD display:

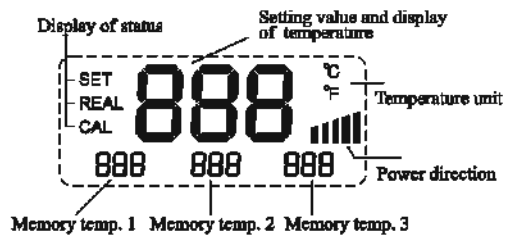

Display of status
 SRT: Set Temperature
 REAL: Real Temperature
 CAL: Calibration Temperature


Features:

- New appearance design, big LCD screen, for clear and convenient reading.
- PID power control loop with constant temperature set by MCU computer for more precision temperature control.
- Imported temperature-beard materials with long life.
- It is convenient that the device adopt three programmable knobs in different condition.
- Display the temperatures between Fahrenheit and Celsius flexibly, convenient for the type of operators.
- Computerized temperature calibration can correct the difference between the actual and display temperature quickly.
- Heating element malfunction alert.


Replacing the heating element

Note: diagram ⑦ is soldering station AT938/AT938D, heating element resistance about 8~10Ω; diagram ⑧ is soldering station AT980/AT980D, heating core resistance (red) about 2.5~3.5Ω, sensor (blue) resistance about 43~58Ω.

1. Power off the unit and unplug the device. Wait for the heating element to cool down.
2. Loosen the nut ①,
3. Remove the tip retainer ② and soldering tip ③
4. Unscrew heating contact ④, remove grouping spring ⑤
5. Remove the full heat wire group ⑥.
6. Please reference to diagram Section ⑦ - ⑧
7. Replace the old one the good condition heating element
8. Reverse the process to secure the heating element in the handle.

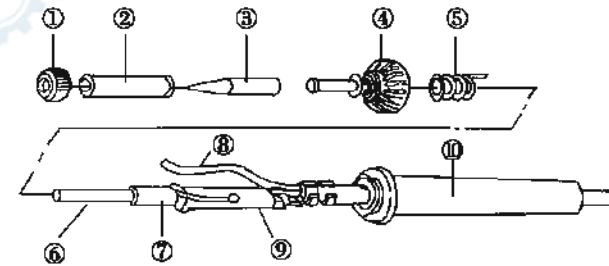

AT938/AT938D diagram (7)

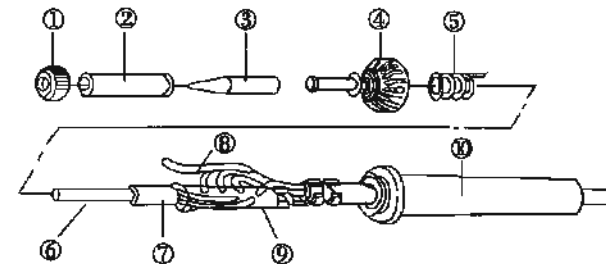

AT980/AT980D diagram (8)

AT938/AT980 Control Panel Guide



Features:

- Fresh new appearance, simple and beautiful
- Accurate temperature control
- Extended longevity
- °F and °C co-reference

Operation:

1. Prepare

Plug the handle with main body and turn tight, place it on stand, connect power source.

2. Dial temperature

Dial the knob to a temperature value you required, switch on the main body, temperature indicator light as a result. Temperature indicator flickers means the temperature of iron tip reaches to set value. Now you can do the soldering job.

3. Calibrate temperature

When the heating element or soldering tip is replaced, you need calibrate the tip temperature. Please set temperature at 350°C, 30 seconds later fine-tune the "CAL" in panel by a "-" or "+" screwdriver.

4. self examination

If the machine cannot reach to a set temperature within 30 seconds or longer, it might due to the malfunction of heating element. How to replace it please refer to Chapter: replacing the heating element.

Operating Guidelines



Please refer to the "Control Panel Guide" section for buttons and display panel details

1. Connection:

- 1.1. Insert soldering iron's plug into the socket and tighten the nut on the plug securely and place it in iron holder.
- 1.2. Inset station's power cord into power plug on the back panel and plug the cord into a power source.


2. Power on:

- 2.1. Turn on the unit.
- 2.2. The Digital display will initially display the current set temperature (the value of last time using) for 3 seconds. After few seconds it would display the actual temperature with temp unit "°C or °F". (diagram 1), (diagram 2)

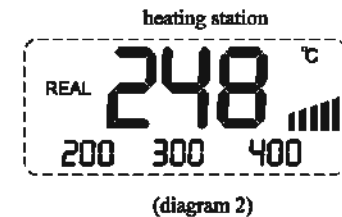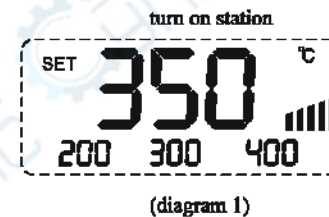


3. Adjusting temperature:

Under normal working condition, pressing and holding button "▲" or "▼", you can either increase or decrease the temperature quickly. Keeping the knob in pressed will adjust the temperature setting quickly; short pressing knob, you can adjust temp step by step. The display screen shows the temperature value simultaneously. Release knob for 3s to store. (Diagram 3)

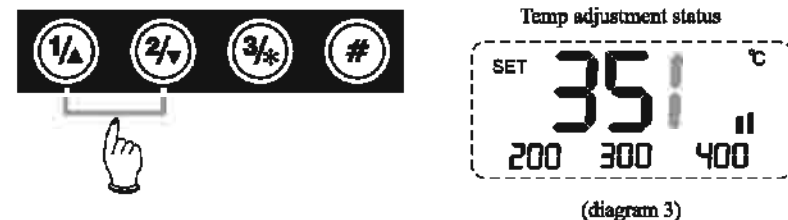

4. Quickly adjusting temperature

4.1. Under working condition, you can set working temperature quickly by programmable buttons. Press the button once to extract setting temperature stored in button "1, 2 & 3", this way you can easily set the working temperature.

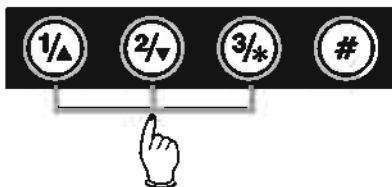

4.2. Pressing button “#” and buttons “1, 2, 3”, you can store the setting temperature into fast channel knobs “1, 2, 3”.




4.3. Temperature hotkey

- A. Hotkey 1 is usually applied to store a 200°C or lower temperature value at which level machine stands by and on rest.
- B. Hotkey 2 is a shortcut of temperature between 300°C to 350°C at which level a general soldering job can be done.
- C. Hotkey 3 is a fast channel to high temperature of 380°C specified for special welding job.

5. Temperature calibration

You need calibrate the temperature of tip after you replace with a new heating element or tip.

- 5.1. Enter into calibrating station by long pressing knob “*” (>3s).
- 5.2. You can directly adjust the value of calibration by pressing knob “▲” or “▼”.
- 5.3. The value of calibration is temperature measured minus the settings. (e.g. Actual value 380°C - setting value 350 °C = +30 °C. Pressing knob “▲” adds 30 °C; Actual value 320 °C -setting value 350 °C = -30 °C. Pressing knob “▼” minus 30 °C).
- 5.4. The calibrating temp range is +50 °C ~ -50 °C.
- 5.5. You can press knob “*” to store after you finish calibration. (diagram 4)

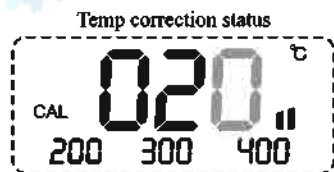

(diagram 4)

6

6. Temp. unit exchange

In the power off condition, press and hold knob “#”, then turn on the station, the temp unit will be changed between “°C” and “°F” and store automatically.



7. Temperature lock function (AT980D only)

Temperature LockDisplay: “Loc”, short of Lock, located in right bottom of LCD display screen. Temperature lock&unlock function can be realized by pressing “#” for three second or longer. Whenever the machine is locked as above photo shows, the functional key in panel lose effect.



8. False alarm

When “H-E” or “S-E” is displayed on the screen, there is some wrong in heating element or the circuit. (diagram 5, 6). Turn off the unit and follow the instructions to replace the heating element.



(diagram 5)



(diagram 6)

7