

Инструкция по эксплуатации USB тестера UNI-T UT658

110401106328X UT658 英文说明书Manual(单页)80*30mm "UNI-T"唛 REV.1(RoHS)

UNI-T®

UT658 USB Tester

1.Specification

Input voltage (DCV): 3.0V-9.0V Load current (DCA): 0A-3.0A Monitor charge capacity: 0-9999mAh Memory: 10 sets

2.Usage

- Plug the tester into charger or power bank and observe the USB tester voltage. If output voltage is higher than the allowable charging voltage range, please stop using the charger or power bank. If the voltage is higher than 5.30V or lower than 4.70V, a warning symbol will indicate that output voltage is outside the normal USB range of 5V.
- If the output voltage is normal, then plug the charging cable into the tester and connect your electronic product to the tester's cable.
- Short press the button to select one of the ten sets for data recording. Long press the button for 1.5 seconds to clear the current record.
- If necessary, users can change different charging cables for charging. Observe the USB tester's displayed current and select the most suitable charging cable (the higher the current, the better the quality).