

1. Description:

ZK-DP2F is a DC adjustable constant voltage constant current step up/down power supply module with LED digital tube display. It supports fast charging for QC2.0, QC3.0, AFC, FCP, SCP fast charge protocols. Display output voltage, output current and output power. Adjustable output voltage and current. Set output current to meet the requirements. It can be used as an ordinary buck power supply module, charger and LED constant current driver. Simple and efficient, practical.

2. Features:

- 1>.Support fast charger
- 2>.Support anti-backflow protection
- 3>.Support constant voltage constant current adjust
- 4>.4-Bit digital tube display
- 5>.Three input power modes
- 6>.Support over-current protection
- 7>.Support over-voltage protection
- 8>.Support over power protection
- 9>.Support over temperature protection
- 10>.Support charging mode
- 11>.High resolution
- 12>.Multiple parameters can be displayed in turn
- 13>.Comfortable outer casing

3. Parameters:

- 1>.Product Name:ZK-DP2F USB CVCC Fast Charger Buck Boost Voltage Converter
- 2>.Product Number:ZK-DP2F
- 3>.Input Voltage for Pads:DC 4.0V-13.0V(Note USB input)
- 4>.Input Voltage for USB:DC 5.0V
- 5>.Output Voltage:DC 0.5V-30.0V
- 6>.Output Current:2A
- 7>.Output Power:15W(Max)
- 8>.Voltage Display Precision: +/-0.1V
- 9>.Voltage Display Resolution:0.1V
- 10>.Current Display Range:0~2.2A
- 11>.Current Display Precision: +/-0.05A
- 12>.Current Display Resolution:0.001A
- 13>.Capacity Precision:0.00W~15.0W
- 14>.Protection Temperature Threshold:100°C
- 15>.Conversion efficiency:95%
- 16>.Working current:30mA
- 17>.Short Circuit Protection:Yes
- 18>.Anti-backflow Protection:Yes
- 19>.Over-Current Protection:Yes

- 20>.Over-Voltage Protection:Yes
- 21>.Over-Power Protection:Yes
- 22>.Working Temperature range:-20°C~85°C
- 23>.Working Humidity Range:0%-95%RH
- 24>.Size:83*34*23mm

4.Fast Charger Function:

- 1>.Support intelligent fast charge deception function to solve the problem of insufficient power supply of USB input port.
- 2>.Support mainstream fast charging protocol:QC2.0, QC3.0, AFC, FCP, SCP.
- 3>.User can choose not to deception or automatically choose the deception mode.

5.Button/Potentiometer/LED introduction:

- 1>.Long press means need keep press for more than 3second.
- 2>.Left Button:ON/OFF button.Short press is used to turn ON or OFF output voltage at display mode or as 'Minus -' in calibration mode or trigger fast charge at fast charge protocol selection mode.Long press is used to set default ON or OFF for next re-power at display mode.
- 3>.Right Button:SELECT button.Short press to switch display output voltage, output current, output power or display these parameters in turn at display mode or as 'Plus +' in calibration mode or trigger fast charge at fast charge protocol selection mode.Long press is used to enter or exit calibration mode.
- 4>.TRIG Button:Short press to select fast charging protocol.Long press to enter or exit the fast charge protocol selection interface.
- 5>.CV Potentiometer:Adjust output voltage.Increase the output voltage when rotating clockwise.Please rotate the CV potentiometer 10 turns in counterclockwise if the output voltage cannot be adjusted.
- 6>.CC Potentiometer:Adjust output current.Increase the output current when rotating clockwise.Note:It is not keeping a fixed output current.When the load current reaches the set current value, the module starts to fix output this current value.Short circuit output terminal when adjust output current.
- 7>.ON LED:Green Output indicator.It will turn ON when there is a output at output terminal.Otherwise it is OFF.
- 8>.CC LED:Red Constant current output indicator.It enters the constant current state when the load current reaches the set current and CC constant current indicator turns ON.
- 9>.FC LED:Blue Fast charge deceiving indicator.Fast charge protocol after the successful deception.
- 10>.Input terminal:There are three input methods:
 - 10.1>.Method 1:Standard Type A USB Male .It just can input DC 5V.
 - 10.2>.Method 2:Micro USB Female.It just can input DC 5V.
 - 10.3>.Method 3:Type-C USB Female.It just can input DC 5V.
 - 10.4>.It can only choose one input method.
- 11>.Output terminal:KF-301-2P 5.08mm blue terminal. It can output DC

0.5V-30.0V.

6. Calibration:

1>.ZK-DP2F can calibrate output voltage and output current.

2>.Calibrate output voltage:Long press button 'SELECT' when display output voltage into calibrate output voltage.Then the screen will flashing.Short press button 'ON/OFF' to decrease the value.Short press button 'SELECT' to increase the value.Long press button 'SELECT' again to save and exit setup mode.Note:User deed to press the button multiple times then parameters will change if the voltage is very low.

3>.Calibrate output current:Long press button 'SELECT' when display output current into calibrate output current.Then the screen will flashing.Short press button 'ON/OFF' to decrease the value.Short press button 'SELECT' to increase the value.Long press right button again to save and exit setup mode.Note:User deed to press the button multiple times then parameters will change if the current is very low.The calibration is more accurate when the current is greater than 1A.The display error is large when the output current is less than 0.05A.Module may not be displayed when the output current is less than 10-40mA.

7. Protective function:

1>.Over-Voltage Protection:Module will turn OFF output voltage automatically if output voltage is more then 30.5V.

2>.Over-Current Protection:Module will turn OFF output automatically if output current is more then 2A.

3>.Over-Power Protection:Module will turn OFF output automatically if output power is more then 15W.It will display '-OP-'.User need reduce load power and then press 'ON/OFF' button.

4>.Current error:Large display error when output current is less than 0.05A.It can not display output current if current is 10~40mA.

5>.Over Temperature Protection:Module will turn OFF output automatically if temperature is more then 100°C.It will display '-OT-'.User need reduce load power and then press 'ON/OFF' button.

8. Using Steps:

1>.As a ordinary step down power module:

1.1>.Connect right input voltage at input terminal;

1.2>.Adjust CV constant voltage potentiometer to set output voltage according to require.Rotate CV potentiometer counterclockwise more than 10 turns if the output voltage can not be adjusted.

1.3>.Rotate CC potentiometer counterclockwise more than 10 turns at first.

1.4>.Test Output short circuit current by multimeter at 10A or 20A(Connect two Test Probes to output terminal on module).Or Short circuit output terminal directly.

1.5>.Rotate CC constant current potentiometer clockwise to set output current according to require over-current protection value.

1.6>.Test and using(E.g:Module's maximum output current is 1A if display 1A on multimeter.Red LED indicator will turn on if output reach to 1A.Otherwise LED is OFF.)

1.7>.The output voltage will decrease due to the current sampling resistor at the output. The higher the current, the more the voltage is reduced.

1.8>.Output current can not keep fix value output.It changes with load.But It can not exceed set output current value.

2>.As a charger:

2.1>.Tops:Power supply module can not be used as charger module if it does not support constant current function.The voltage difference between the battery with insufficient voltage and the charger is very large.Causes excessive charging current even damage the battery.So it need keep charging in constant current mode to reaching a certain level.Then automatically switch back to constant voltage charging.

2.2>.Make sure floating charge voltage and charge current for battery.If the lithium battery's parameter is 3.7V/2200mAh, then the float charge voltage is 4.2V, and the maximum charging current is 1C, which is 2200mA.

2.3>.Connect right input voltage at input terminal.(Note:Please don't connect load during set parameter).

2.4>.Test output voltage by multimeter and adjust CV potentiometer to make sure output voltage reach to require floating charge voltage.(If charge a 3.7V lithium battery, adjust the output voltage to 4.2V).Or Short circuit output terminal directly.

2.5>.Rotate CC potentiometer counterclockwise more than 10 turns at first.

2.6>.Test Output short circuit current by multimeter at 10A or 20A(Connect two Test Probes to output terminal on module)

2.7>.Rotate CC constant current potentiometer clockwise to set output current according to require charge current value.

2.8>.Connect battery at output terminal and start to charging.

3>.As a high power LED constant current driver:

3.1>.Make sure LED working current and maximum working voltage.

3.2>.Connect right input voltage at input terminal.(Note:Please don't connect load during set parameter).

3.3>.Test output voltage by multimeter at output terminal and adjust CV potentiometer to set output voltage to LED's maximum working voltage.

3.4>.Rotate CC potentiometer counterclockwise more than 10 turns.

3.5>.Test Output short circuit current by multimeter at 10A or 20A(Connect two Test Probes to output terminal on module)Or Short circuit output terminal directly.

3.6>.Rotate CC constant current potentiometer clockwise to set output current according to require LED working current.

3.7>.Connect LED and test.

9.Note:

- 1>.It is a DC power module,So it can not connect to AC power.
- 2>.Please don't short output.
- 3>.Please make sure input power is more than load power.
- 4>.Please step down output power if module is hot.
- 5>.Rotate CV potentiometer counterclockwise more than 10 turns if the output voltage can not be adjusted.
- 6>.Output current can not keep fix value output.It changes with load.But It can not exceed set output current value.
- 7>.There is a protective film on the surface of the shell. It is recommended to tear it off for a clearer effect.
- 8>.Please read use manual and description before use.

10.Application:


- 1>.Ordinary power supply
- 2>.Battery charger
- 3>.LED drive power
- 4>.Instrument voltage display
- 5>.Test meter
- 6>.Circuit test
- 7>.Power conversion
- 8>.Fan governor

11.Package:

- 1>.1pcs ZK-DP2F USB CVCC Fast Charger Buck Boost Voltage Converter

Button operation instructions

	Normal Display Mode	Calibration Mode	Fast Charge Mode
ON/OFF	<p>Short press : Turn ON or OFF output voltage</p> <p>Long press : Set default ON or OFF for next re-power</p>	<p>Short press : Adjust paramter value. Decrease parameter value</p>	<p>Short press : Trigger fast charge</p>
SELECT	<p>Short press : Switch display output voltage, current, power.</p> <p>Long press : Enter or exit calibration mode</p>	<p>Short press : Adjust paramter value. Increase parameter value</p>	<p>Short press : Trigger fast charge</p>
TRIG	None	None	<p>Short press : Select fast charging protocol.</p> <p>Long press : Enter or exit the fast charge protocol selection interface</p>

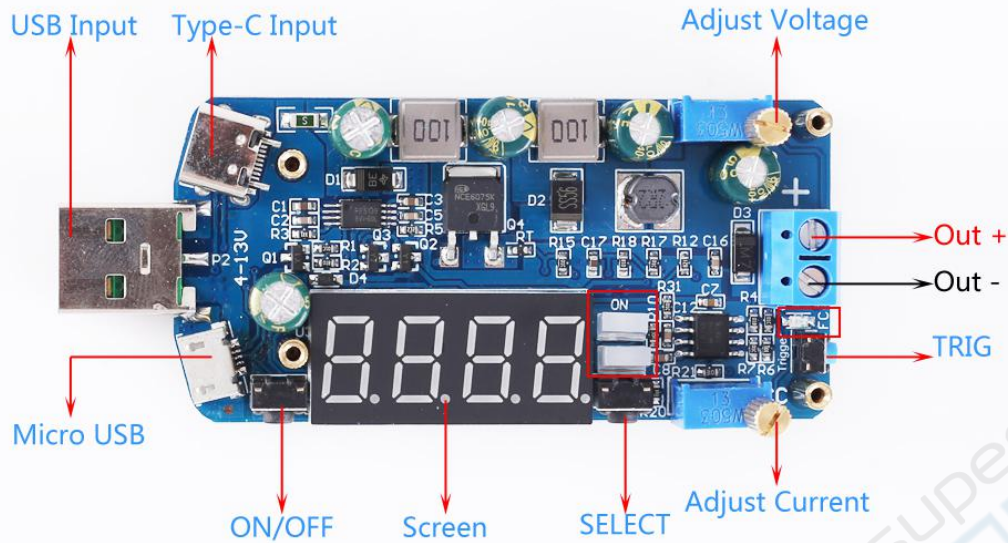

- 1>.ON LED:Green Output indicator.It will turn ON when there is a output at output terminal.Otherwise it is OFF.
- 2>.CC LED:Red Constant current output indicator.It enters the constant current state when the load current reaches the set current and CC constant current indicator turns ON.
- 3>.FC LED:Blue Fast charge deceiving indicator.Fast charge protocol after the successful deception.
- 4>.Support intelligent fast charge deception function to solve the problem of insufficient power supply of USB input port.
- 5>.Support mainstream fast charging protocol:QC2.0, QC3.0, AFC, FCP, SCP.
- 6>.User can choose not to deception or automatically choose the deception mode.



supereyes.ru
СУПЕРПАЙС