Инструкция по эксплуатации для кабель-тестера NF-801B





INSTRUCTION MANUAL

Wire Tracker



Contents

interfaces and functions	1
Parts of emitter	1
Parts of receiver	1
Telephone cable tracing function	2
Network cable tracing function	3
Electric wire tracing function	4
Network cable Collation function	5
Others function	6
Open circuit or short circuit testing function	6
DC level testing function	6
Accessories	7
Specification of product	8
Diagram of series products	9

interfaces and functions

Find wire on all types of connected operating
Ethernet switch/Router/PC terminal



Telephone cable tracing function







- 1. Directly insert telephone wire with RJ11 plug into the RJ11 socket of emitter; (Note: Never put energized telephone cable into RJ45 port, in fear of burnout to the tester)
- 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes, which means normal work of emitter;
- 3. Press the inching button, use the probe of receiver to find target wire at the other end;
- 4. During testing, function switchover button can be pressed for switchover of dual-tone.



CASE

Find wire on switch



Connect emitter with the telephone line to be found



Trace cable with receiver at the other end

Find wire on patch panel



Connect emitter with the telephone line to be found



Trace cable with receiver at the other end

Network cable tracing function







- 1. Directly insert network cable into the RJ45 port of emitter:
- 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes which means normal work of emitter;
- Press the inching button, use the probe of receiver to find target wire at the other end:
- 4. During testing, function switchover button can be pressed for switchover of dual-tone.

Rapidly find the target wire from among plenty of network wifes

CASE

ind wire on router



Connect emitter with the network cable to be found



Trace cable with receiver at the other end

Find wire on net bar



Connect emitter with the network cable to be found



Trace cable with receiver at the other end

Electric wire tracing function







- Directly insert RJ11 of crococile clip into RJ11 port of emitter, connect telephone line with the clamp;
- Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes which means normal work of emitter;
- Press the inching button, use the probe of receiver to find target wire at the other end;
- During testing, function switchover button can be pressed for switchover of dual-tone.



CASE Note: The equipment is prohibited to be used on heavy-current wires



Connect emitter with electric wire to be found



No need electric machine to drill!



How to find the wire from among so many wires? It is so slow by using a multimeter.

Network wire Collation function

- 1. Insert the two ends of the network wire into Rj45 port emitter and receiver.
- Push function switchover button on emitter to the position of "TEST", testing indicator "VERIFY" flashes meaning normal work of emitter.
- According to 18 indicators, judge the characteristics of short-circuit, breaking circuit, open circuit and crossing.
- n can be proceed for suitebour

 During testing, function switchover button can be pressed for switchover of fast and slow levels.



CASE

Note: The equipment is prohibited to be used on heavy-current wires

Support direct wire collation of operating switch

Replace the above tester in cabling

It can take place of cable tester

It can rapidly test open circuit/short circuit and crossing through the 18 status indicators, which is accurate and clear.





Others function

Open circuit or short circuit testing function

Push DIP switch on emitter to position of "TEST", press function switchoverbutton on emitter for 2 seconds, "VERIFY" indicator will change "flash" to "lighting" connect crocodile clamp with RJ11 port, clamp the two ends of cable with crocodile clamps, in case of short circuit, indicator "1" of emitter will light up, otherwise it will not. Impendance can be indicated by brightness of status indicators: the lighter, the smaller the resistance is; the darker, the bigger.

DC level testing function

Push DIP switch on emitter to position of "SCAN", press function switchover button on emitter for 2 seconds, "STATUS" indicator will turn off and "VERIFY" indicator flashes, insert the crystal plug of crocodile clamp into RJ11, clamp the two ends of cable with crocodile clamps, in case that "STATUS" indicator lights up in red, it means the end clamped by red clamp is positive pole, in case that "STATUS" indicator lights up in green, it means the end clamped by red clamp is negative pole, electric level can be judged by brightness of the status indicators; the lighter the indicator, the higher the level is; the darker, the lower.



test positive and negative pole of DC electric level

Low voltaage alarm function

Push DIP switch on emitter to position of "SCAN", if the that battery level is lower than 6.0V, "STATUS" and "VERIFY" indicators will light up at the same time, it indicates to have new battery.

Earphone function

In noisy environment, earphone can be used to prevent interference from the outside.





Volume adjusting funcction

While tracing cable, volume can be adjusted for moderate level of sound.

Spotlight function

You can easily work as usual with backlight at night and in dark.

Energy-saving

Inching switch can automatically delay power-off. The continuous lifespan of battery is over 50 hours.

Accessories



RJ11 adapter cable

Crocodile clip

RJ45 adapter cable

Earphone

9V battery

Applicable users

Telecom bureau/net bar/telecom engineering companies / network engineering companies/power supply/ army and other departments requiring wire.

Applicable scope

Wire engineering of telecom, network and regular maintenance work; network line engineering of computer; other wire engineering and maintenance.

Specification of product

Item	Specification		
Product name	Wire tracker		
Power supply	DC, 9V battery		
The max working current	Emitter	≤10mA	
	Receiver	≤30mA	
Signal transmission format	Multi-frequency impulse		
Signal output electric status	8Vp-p		
Distance of signal transmission	≥2km		
Appearance dimension	Emitter	126×49×34,mm	
	Receiver	175×42×27,mm	
	Whole set	270×165×45,mm	
Weight	Emitter	0.060kg	
	Receiver	0.072kg	
	Whole set	0.420kg	

The list of package

1. Emitter	1 piece	6. Cable with crocodile clamp	1 piece
2. Receiver	1 piece	7. RJ45 adaptor cable	1 piece
3. 9V battery	2 pieces	8. Instruction manual	1 piece
4. Earphone	1 piece	9. Toolkit	1 piece
5. RJ11 adaptor cable	1 piece	10. Color box	1 piece

Diagram of series products



NF-306



NF-868



NF-8208



NF-268



NF-806R



NF-816



NF-468L



NF-3468



NF8108-M



NF-388



NF-903



NF-906A



Your excellent helper in cable test!

SHENZHEN NOYAFA ELECTRONIC CO.,LTD