

Supereyes Digital Borescope

User's Manual

(N012, N012J)

Introduction

Thank you for using **Supereyes** Digital Endoscope


Supereyes Digital Endoscope is a new-designed digital endoscope of High-Definition, multi-function, which is easy to operate and high efficient. In order to make you enjoy the fun of using Digital Endoscope, please read this User's Manual.

1. Product Description:

- 1) Speculum: ϕ 9MM
- 2) Picture elements: 640*480 High-Definition displays
- 3) 500mm(N012),1000mm(N012J) flexible hose(could be customized)
- 4) Larger capacity battery can be applied



- ①on/off ②Indicator light ③Decrease brightness ④increase brightness ⑤Focus knob

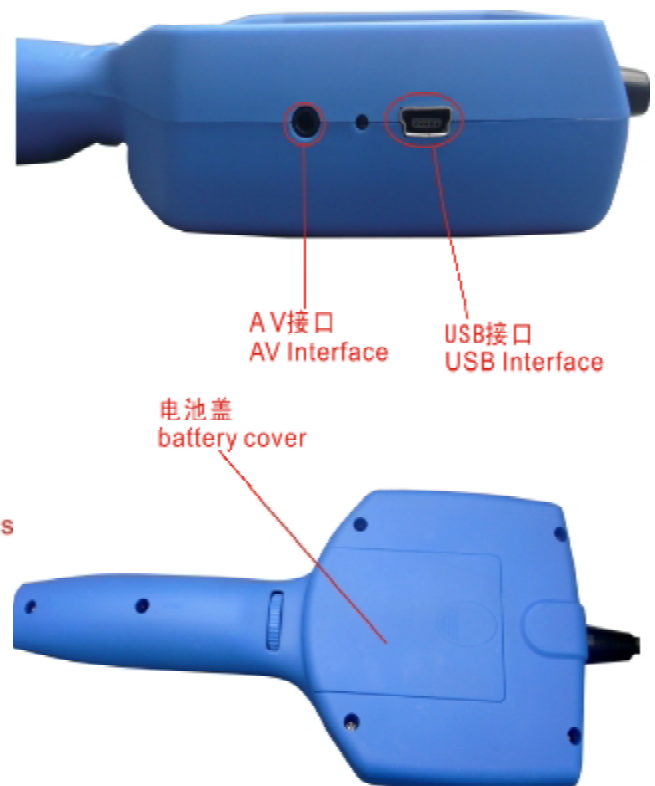

2, Operation Specification

1) On/off

On: Press “on/off” for 2 seconds to start and indicator light will turn on;

Off: press “on/off” for 2 seconds and indicator light will turn off.

2) Focus adjust: lens aiming at the target object, revolving the focus knob to make the image clear

3) Lightness adjust: press ③ to decrease; while press ④ to increase

4) Indicator light signal: green for working; red for short of voltage; blue for charging

5) Charging: connect endoscope to USB interface, indicator light turns blue (non-working condition) or bright blue (working condition)

6) Change battery: push the battery cover out, change battery, and then cover the battery back.

7) Connect TV or monitor: insert the AV audio plug into AV interface of endoscope, then connect AV plug into TV or monitor

